


The Male to Female RS-232 interface cable is used to connect the balance or weighing scale to other devices such as the ATP Thermal Printer or simply to a computer. Data collection is streamlined and you no longer have to input the readings manually

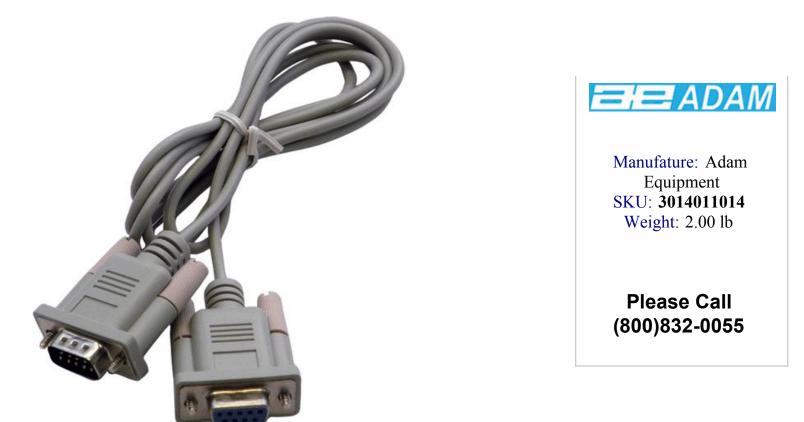

## **Features**

The Male to Female RS-232 interface cable is used to connect the balance or weighing scale to other devices such as the ATP Thermal Printer or simply to a computer. Data collection is streamlined and you no longer have to input the readings manually

## i81u812

